

## Trouble Shooting

If the unit doesn't operate...	Check that the batteries are installed correctly. or Install new batteries.
If the volume is too low...	Install new batteries.
If the voice/music begins playing at a very high or low rate of speed...	Install new batteries.
If there is a continuous buzzing sound and the unit doesn't operate...	Install new batteries.
If the unit malfunctions...	Install new batteries.

## Important Information

### Care instructions:

- Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Do not expose the unit to moisture or water.

This product complies with the essential requirements of European directives

### Warranty:

Should you in the unlikely event experience any problems with this product all our products have a six month guarantee. In the first instance, return the product back to the place of purchase where a replacement will be issued.

## Customer specific information

### InspirationWorks UK Ltd

First Floor  
The Annexe  
Salisbury Hall  
St Albans  
AL2 1BU



[www.inspirationworks.co.uk](http://www.inspirationworks.co.uk)

[www.cidegroup.com](http://www.cidegroup.com)

© 2012 - CIDE toys

Peppa Pig © Astley Baker Davies Ltd/Entertainment One UK Ltd 2003

Rev01  
March 2013  
Made in China  
Printed in China



WASTE ELECTRICAL PRODUCTS AND BATTERIES  
SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD  
WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST.  
CHECK WITH YOUR LOCAL AUTHORITY FOR  
RECYCLING ADVICE.




2+

# Sing and Learn Microphone

## Instruction Manual

### The Unit

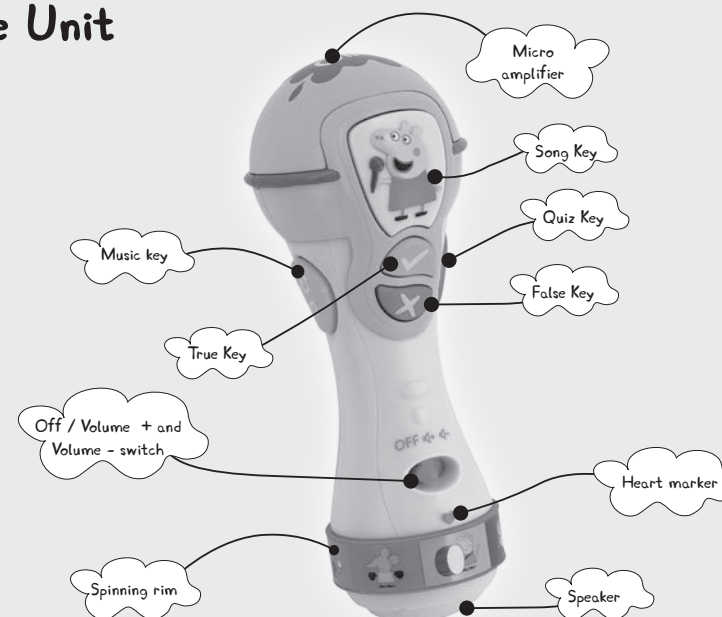

### Important Information

- This toy is suitable for children aged 2 years & over.
- Please retain this manual for further reference.
- **WARNING:** All packing materials such as internal bags, plastic collars, plastic lms, carton inserts are not part of this product and should be discarded for your child's safety.
- **IMPORTANT:** for additional safety, check toys regularly for signs of damage during use.

### Content:

- Electronic microphone with micro amplifier, Instruction Manual



## How to Play

- Before first use of the Peppa Pig Sing and Learn Microphone, you must remove the try-me tag and switch the button of the unit to ON.
- By switching the unit ON, it will play a welcome speech "Music Time!"

### Adjustable volume:

Move the switch to "volume low" to lower the whole sound level of the unit

Move the switch to "volume high" to raise the whole sound level of the unit

### MICROPHONE MODE (DEFAULT MODE):

Speak into the microphone; your voice will be amplified.

Press on TRUE or FALSE key, and the unit will play funny sounds.

Turn the rim: the unit will play the instrument sounds corresponding to each character

### SONG MODE:

Press on the SONG key, and the unit will play a welcome speech "Let's sing together!"

Turn the rim to select a song."

In this mode, sing with Peppa using the micro amplifier or listen to Peppa singing. In

order to select a song, turn the rim.

Each character is linked to a song.

Loaded with 7 songs: **Grandpa's little train, Big Balloon, Ring-a-Ring o'roses, It's**

**rainy! It's pouring!, Incy wincy spider, Mary had a little lamb, Pat-a-cake**

Repeat: press the SONG key while a song is being played, and it will stop the song and repeat it from the beginning.

Press on the TRUE or FALSE key, and the unit will play funny sounds.

### MUSIC MODE:

Press on the MUSIC key, and the unit will play a welcome speech "Turn the rim to select one music".

In this mode, practice singing using the micro amplifier. In order to select a song, turn the rim and stop a character in front of the heart marker.

Each character is linked to a song.

Loaded with 7 tunes: **Grandpa's little train, Big Balloon, Ring-a-Ring o'roses, It's**

**rainy! It's pouring!, Incy wincy spider, Mary had a little lamb, Pat-a-cake**

Press the SONG key while music is playing, and Peppa's voice will be added over the music.

Repeat: press the MUSIC key while a song is playing, it will stop the song and repeat it from the beginning.

Press on the TRUE or FALSE keys, and the unit will play funny sounds.

### QUIZ MODE:

This game's aim is to recognise colours, phonics, instruments and characters.

When pressing the quiz key (on the side of the microphone), the unit will ask one question. After 10 seconds, if no key has been pressed, the unit will repeat the question.

To answer, the child should use the true or false keys or the rim.

Repeat: press the quiz key again, and the unit will repeat the question

Note: voice amplifier is not active in Quiz Mode.

## How to Change Batteries


This product requires 3 x AAA- LR03 1.5V batteries  
When required, using a suitable screwdriver, undo and remove the battery cover located under the unit. Insert 3 x AAA- LR03 1.5V batteries into the compartment ensuring they are installed the correct way around.

The polarities are marked inside the battery compartment.

Should the batteries have no polarity markings, the at end of the battery should always be inserted against the spring.

Reassemble the battery cover and tighten the screw to secure.

Do not over tighten.

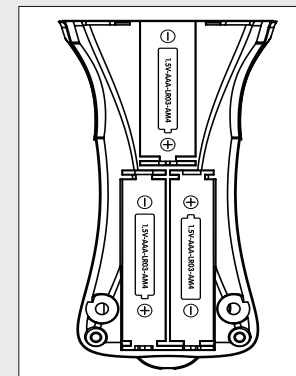

### Please note the important points below when using batteries to power this product:

- Batteries should be inserted and removed by an adult.
- Only use the type of batteries specied in this user manual, or equivalent type. We recommend the use of alkaline batteries.
- Follow the polarity diagram inside the battery compartment and the polarity markings on the batteries.
- An incorrect location may either damage the toy, or cause battery leakage, or, to an extreme degree, lead to battery explosion.
- Do not try to charge non-rechargeable batteries, as they may leak or explode.
- Replace all batteries at the same time.
- Do not mix new with old batteries
- Do not mix different types of batteries (i. e. alkaline and zinc carbon)
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product.
- Do not short-circuit the supply terminals. Store batteries away from metal objects.
- Do not dispose of batteries in re, as they may leak or explode. Never disassemble batteries.
- Rechargeable batteries should not be used.
- When rechargeable batteries are used anyway :
  - Rechargeable batteries shall be charged only under the supervision of an adult.
  - Rechargeable batteries shall be removed from the toy before being charged (if they can be removed)
- If a battery is swallowed, consult a Doctor or Medical Facility. Don't forget to take the product with you.
- If battery leakage occurs and comes in contact with the skin or eyes, wash immediately with lots of water.
- Batteries are included for demonstration purposes only and may need replacing after purchase.
- Strong Electro Magnetic Interference may disturb the normal function of the product. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function does not resume, please use the product in another location.